


EN User manual for Solight WZ6101 LED light source

Dear customer, thank you for purchasing our product. This is a LED light source designed for ceiling lights with metal base. The light source is attached to the base with built-in magnets. Please read the following instructions carefully and follow them to serve you safely and to your full satisfaction. This will prevent misuse or damage. Avoid unprofessional handling of this appliance and always observe the electrical appliance usage guidelines. Do not hang or cover the luminaire with anything. Keep the instruction manual carefully. Installation may only be carried out by a qualified worker qualified in accordance with Decree No 50/1978 Coll., as amended, at least a worker knowledgeable in accordance with Section 5 of Decree No 50/1978 Coll., as

TECHNICAL PARAMETERS

| | |
|--------------------------|-------------|
| Operating voltage | 220-240V AC |
| Consumption | 12W |
| Average | 130mm |
| Height | 24mm |
| Illumination angle | 160° |
| Chromaticity temperature | 4000K |

INSTALLATION

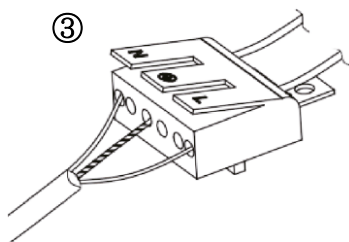

Disconnect the power supply before installation.

1. Remove the luminaire cover
2. Attach the luminaire source to the metal base with a magnet
3. Connect the power cord to the terminal block and make sure the wiring is correct
4. Close the luminaire cover
5. Switch on the power supply

At the end of its service life, the luminaire must be disposed of in a designated place.

The manufacturer is not liable for any damage caused by improper use.

Solight Holding, s.r.o., Na Brně 1972, Hradec Králové 500 06, Czech Republic.